


Pairing the Remote Control

To the Standard Door Contact

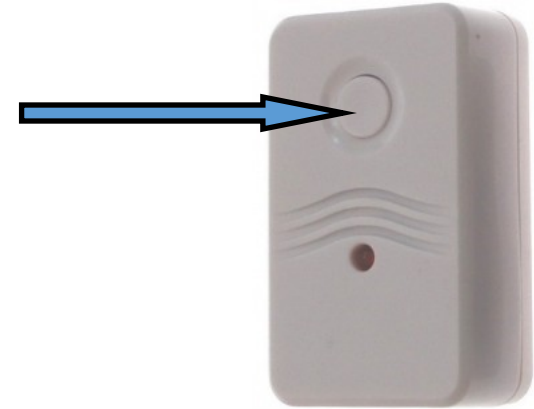

Press & Hold both Buttons
LED on Contact will Flash



To the Keypad Door Contact



Press & Hold both Buttons
Wait to hear a Beep

