





Ultra Secure >>DIRECT

9-10 Ryehill Court, Lodge Farm Ind.Est.
New Duston, Northampton NN5 7EU
www.ultrasecuredirect.com
Tel: 01604 589414 Fax: 01604 582090
Email: info@ultrasecuredirect.com

For your convenience the Panic & Reset Buttons have been paired into the Siren Assembly for you.

Installation Tips Below:

- Fit the Siren assembly to the wall using the corner mounted screw holes (near to a suitable power supply socket).
- Plug the 3-pin Transformer into the wall socket.
- Test the Siren by Pressing the Red Button on the Panic Button (see image below).
- Turn OFF the Siren & LED by pressing the Disarm Button (see image below).
- Should you want to change the Volume or Tone of the Siren, please carefully remove the six front mounted screws on the Siren assembly to gain access to the rear of the Siren, volume can be adjusted by rotating the POT (as seen below) and the tone can be adjusted by moving the dip-switches (as per enclosed instructions and image below).
- Once the testing is complete, fit the Panic Button into the desired location using double sided tape.
- Place the reset button into a safe location.

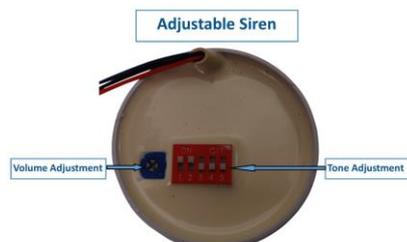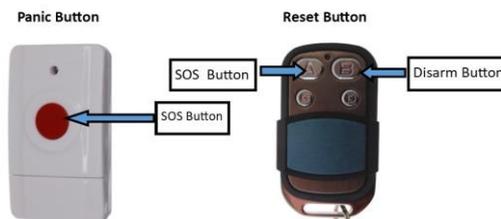

Accessories:

It is possible to add many types of accessories to this Panic Alarm, the most popular are shown below, but please contact us should you be looking for a specific device that is not listed below:

Panic Button



005-0700

Reset Button



005-0630

Wristband Button



005-1480

Long Range Button



005-1460

Necklace Button



005-0680

Signal Repeat-



005-0760

Smoke Detector



005-0670

Water Detector



005-0760

For further advice, please contact:

Ultra Secure Limited

Telephone: 01604 589414, option 1 (sales), option 2 (service).

Email: info@ultrasecuredirect.com

Website: www.ultrasecuredirect.com