



10 Ryehill Court, Lodge Farm Ind.Est
New Duston, Northampton NN5 7EU
www.ultrasecuredirect.com
Tel: 01604 589414 Fax: 01604 582090
Email:info@ultrasecuredirect.com

To learn new beams and sensors and remotes into the receiver.

Press and hold the select button until the desired zone LED lights up and then release the button after which you need to operate the beam\sensor\remote, you will hear a confirmation beep from the receiver.

If you have any further beams or devices to learn in, then either learn them into the current zone or press and hold the select button until the required zone LED lights up and repeat the process, when you have learned all devices in then you MUST press and hold the select button until the power LED lights up and release. To erase a sensor from the receiver, press and hold the select button until the required zone LED lights then release the button, then press and hold the delete button until you see the zone LED flick off and then come back on, all sensors in that zone are now deleted.