



9-10 Ryehill Court, Lodge Farm Ind.Est
New Duston, Northampton NN5 7EU

www.ultrasecuredirect.com

Tel: 01604 589414

Email: info@ultrasecuredirect.com

Repeater Pairing:

Plug in the repeater using the enclosed mains adapter and position it in a position where it will pick up the signal from all of the beams/sensors/remotes that you have in your system.

If you already have some beams from a previous setup then you will need to learn them in to the repeater by pressing the status key three times after which the learn LED will light, then walk through your sensors that you wish to learn in and when you have finished press the status key to return back to the standby state.

Please note you can add many types of additional accessories in the future including:

- ◆ Remotes
- ◆ Additional Beams
- ◆ Solar Sirens
- ◆ Additional Receivers
- ◆ Receiver Power Supply, with built in Battery Back Up.

If you need any assistance or have any questions please contact us:

- ◆ Technical Support: Tel 01604589414, ext 2 or email: technical@ultrasecuredirect.com
- ◆ Sales: Tel 01604589414, ext 1 or email: info@ultrasecuredirect.com